



	SPARE PARTS	
	Code	Pieces
3	15822000008263	Condenser assembly
5	12222000006565	Right Side Plate
6	12122000014223	Shield
7	12222300000609	Valve plate
8	12222000003983	Chassis Assembly
9	12222000A02014	Front panel assembly
10	12100105000051	Axial flow fan
11	11002015008264	Brushless DC Motor
12	12222200002154	Supporter subassembly of fan motor
13	12222000008484	Left side plate assembly of cabinet
14	12222000002451	Top cover assembly
15	12222000003984	Partition board assembly
17	15422000016373	4-way Valve Assembly
17.1	15500204000021	Gas valve x2
17.2	15500216000361	4-way valve
18	15422000016372	Liquid valve Assembly
18.1	15500208000028	Liquid valve x2
18.2	15500213000046	Electronic expansion valve subassembly x2
19	11103020003919	DC Inverter Rotary Compressor
21	17222000031064	Electronic control box subassembly
21.2	17122000044630	Outdoor main control board subassembly
21.2.1	12222000001455	Cover of electronic control box
21.2.2	12122000006913	Support of electronic control box
21.3	12222000008644	Electronic installing box subassembly
22	17222000028138	Terminal board subassembly
22.1	12122000014222	Cover of electronic control box
22.2	17122000044632	Inverter module subassembly
22.3	12122000014221	Electronic installing box
22.4	12222000006564	Support of electronic control box
24	15111600000297	Connecting flexible hose assembly
25	15500406000010	Copper nut x2
25	15500406000016	Copper nut x2
26	12122000025363	Air outlet grille
28	11201011000168	Combination Sensor
29	11201007000259	Pipe temperature sensor
40	17402001000603	Crankcase electric heating strip
43	12100509000059	Drain pipe
99	17401203000802	Compressor wire subassembly